

Parts Number	Parts Description	A/C Type	Cert / Remarks
10-3207-1	THERMAL SWITCH	B737	Form 8130
10-60726-5	CABIN ALT	B737	SV-AR TAG only
183010-3	WATER SEPERATOR	B737	SV TAG only
204050-10	AIR CYCLE MACHINE	B737	Form 8130
392686-3-1	DIF. PRESS. REGULATOR	B737	SV TAG only
392716-1-1	VALVE MODE S/O.	B737	SV TAG only
398116-1-1	VALVE AIR MIX.	B737	SV TAG only
541248-7	AIR DOOR ACTUATOR	B737	SV TAG only
548376-3	CONTROL TEMP.	B737	SV-AR TAG only
548384-1	CONTROL CABIN DOOR	B737	SV-AR TAG only
548388-1	CONTROL CABIN	B737	SV-AR TAG only
607400-1-1	TEMPERATURE SELECTOR	B737	SV TAG only
607400-1-1	TEMPERATURE SELECTOR	B737	SV TAG only
607400-1-1	TEMPERATURE SELECTOR	B737	Form 8130
607518-2	AIR TEMP. CONTROL	B737	Form 8130
617166-1	TEMPERATURE SENSOR	B737	SV TAG only
65-52810-25	AIR COND. UNIT	B737	SV TAG only
65-52810-50	AIAR COND ACCESSORY UNIT	B737	Form 8130
67321-26-190	CABIN DUCT CONTROL	B737	SV-AR TAG only
67321-27-250F	OVERHEAT SWITCH	B737	SV-AR TAG only
69-37334-12	CONTROL	B737	SV-AR TAG only
720737-5	SAFETY RELIEF	B737	Form 8130
761260-8	PRESSURE CONTROLLER	B737	Form 8130
927214-1-1	TEMPERATURE SWITCH	B737	SV TAG only
B7040-1-37	55 OF SESOR TEMPERATURE	B737	SV TAG only
B7100	COCK PIT AMBIAR TEMP. SENR	B737	SV TAG only
B7100	COCK PIT AMBIAR TEMP. SENR	B737	SV TAG only
B7250	TEMPERATURE SENSOR	B737	Form 8130
607400-1-1	TEMPERATURE SENSOR	B737	SV TAG only
2587781-901	THROTTLE ACTUATOR	B737	SV TAG only
2588810-903	TCAS PITCH CONT. CHANNEL COMPUTER	B737	Form 8130
2589918-902	POTENTIOMETER	B737	SV TAG only
65-44503-5	RUD. ELEV. FEEL ASSEMBLY	B737	SV TAG only
65-52817-9	AUTO FLT. CONTROL ACCESSORY	B737	Form 8130
65-84209-21	AUTO SPEED BRAKE CONTROL	B737	SV-AR TAG only
979-0106-002	ACCELEROMETER	B737	SV TAG only
D434-56-001	AUTO PILOT FLIGHT STATUS	B737	SV-AR TAG only
D434-56-001	AUTO FLIGHT MOD.	B737	SV-AR TAG only
255-5	P.A. AMPLIFIER	B737	SV TAG only
255-5	P.A. AMPLIFIER	B737	Form 8130

Parts Number	Parts Description	A/C Type	Cert / Remarks
2J1665	JACK PLUG	B737	SV TAG only
5142-1	COCKPIT SPEAKER	B737	SV-AR TAG only
5142-1	COCKPIT SPEAKER	B737	SV-AR TAG only
522-2213-049	HP. CONTOLLER	B737	SV-AR TAG only
525-1501-000	HF. TRANSCEIVER	B737	SV TAG only
565-8262-2	ALTF ANTENNA	B737	SV-AR TAG only
602-3373	HAND MIKE	B737	SV-AR TAG only
602-3373	HAND MIKE	B737	SV-AR TAG only
602-3373	HAND MIKE	B737	SV-AR TAG only
602T	HAND MIKE	B737	SV-AR TAG only
602T	HAND MIKE	B737	SV-AR TAG only
602T4183	HAND MIKE	B737	SV-AR TAG only
622-1396-101	VHF TRANSCEIVER	B737	Form 8130
622-4096-002	P.A. AMPLIFIER	B737	Form 8130
65-52804-125	AUDIO ACCESSORY UNIT	B737	SV TAG only
65-52806-279	MISC SWITCHING	B737	SV-AR TAG only
65C-0578-130	PA PANEL	B737	SV-AR TAG only
65-C25705-105	CB PANEL	B737	SV-AR TAG only
90100-01	HEAD SETS	B737	SV TAG only
90100-01	HAND SET	B737	SV TAG only
90100-01	HAND SET	B737	SV TAG only
90100-01	HAND SET	B737	SV TAG only
90100-01	HAND SET	B737	SV TAG only
90100-01	HAND SET	B737	SV TAG only
90100-01	HAND SET	B737	SV TAG only
90100-01	HAND SET	B737	SV TAG only
903-1342	MICROPHONE	B737	SV TAG only
A152	CVR CONTROL	B737	SV-AR TAG only
D2-72301	COAXIAL SWITCH	B737	SV TAG only
G2355	AUDIO CONTROL PANEL	B737	Form 8130
G-2581	SELCAL	B737	SV-AR TAG only
G3612	AUDIO CONTROL PANEL	B737	Form 8130
G3612	AUDIO CONTROL PANEL	B737	SV TAG only
RD-AX7002-01	TAP REPRE.	B737	SV-AR TAG only
7581418	FILTER ASSEMBLY	B737	SV TAG only
080-20325-01	TRANSFORMER RECTIFIER	B737	SV TAG only
080-20325-01	TRANSFORMER RECTIFIER	B737	SV TAG only
080-20325-01	TRANSFORMER RECTIFIER	B737	SV TAG only
080-20325-01	RECT FOR TRANSFORMER	B737	SV TAG only
10-60752-27	AC AMMETER	B737	SV-AR TAG only
10-60757-27	AC AMMETER	B737	SV-AR TAG only
10-60954-1	BUS PROTECTION PANEL	B737	SV TAG only
124-834	D.C. AMP. INDICATOR	B737	SV TAG only
124-835	FREQUENCY METER	B737	Form 8130
16-003-60	CIRCUIT BREAKER	B737	SV-AR TAG only
170-000-140	CIRCUIT BREAKER	B737	SV-AR TAG only
1724-38-001	LEDEX SWITCHING UNIT	B737	SV-AR TAG only

Parts Number	Parts Description	A/C Type	Cert / Remarks
172938-001	LEDEX SWITCHING UNIT	B737	SV-AR TAG only
1-899-15	SENSOR PROXIMITY	B737	COC
1-899-15	SENSOR PROXIMITY	B737	COC
1-899-15	SENSOR PROXIMITY	B737	SV TAG only
2013-1A	BATTERY ASSY.	B737	SV-AR TAG only
2-299	TRANSFORMER RECTIFIER	B737	Form 8130
307987-425	RELAY	B737	SV-AR TAG only
345-6196-04	ELT TEST SORTELT	B737	SV-AR TAG only
35344-8026	RELAY	B737	SV-AR TAG only
3CG2AB	RELAY	B737	SV-AR TAG only
6042H152	RELAY	B737	SV TAG only
65C25205-226	CB PANEL	B737	SV TAG only
65C25704-132	CB PANEL	B737	SV-AR TAG only
65C25704-327	CB PANEL	B737	SV TAG only
65C25705-327	CB PANEL	B737	SV TAG only
65C25704-507	CB PANEL	B737	SV-AR TAG only
65C25704-710	CB PANEL	B737	SV TAG only
65C36880-7	CB PANEL	B737	SV TAG only
69-39304-12	CB PANEL	B737	SV-AR TAG only
69-41683-28	CB PANEL	B737	SV TAG only
69-4442-919	CB PANEL	B737	SV TAG only
905D0968-3	CURRENT TRANSFORMER	B737	SV TAG only
9124-8073	RELAY	B737	SV-AR TAG only
9125-2ZC-7C4-001	RELAY	B737	SV TAG only
9125-2Z-C7C4-001	RELAY	B737	Form 8130
941D335-2	POWER RELAY	B737	SV TAG only
941D-347-2	GENERATOR RELAY	B737	SV TAG only
9445 / 10-60828-2	TRANSFORMER RECTIFIER	B737	SV TAG only
948F458-14	GCU	B737	SV-AR TAG only
A-31C	RELAY	B737	SV-AR TAG only
AD-2013-1A	BATTERY CHANGER	B737	Form 8130
AD-2013-1A	BATTERY ASSY.	B737	SV TAG only
D-31C	RELAY	B737	SV TAG only
D-31C	RELAY	B737	SV TAG only
D-31C	RELAY	B737	SV TAG only
D-31C	RELAY	B737	Form 8130
SM15CX D8	RELAY	B737	SV-AR TAG only
310-13597-02	CB PANEL TRANSFORMER	B737	SV-AR TAG only
110-340	ALT ANTENNA	B737	SV-AR TAG only
416-0001-23	COFFEE MAKER	B737	SV-AR TAG only
416-0001-23	COFFEE MAKER	B737	SV-AR TAG only
416-0001-23	COFFEE MAKER	B737	SV-AR TAG only
580-099	PORTABLE WATER FRANSIGIBLE VALVE	B737	Form 8130
600380-2	FAUCET ASSEMBLY	B737	Form 8130

Parts Number	Parts Description	A/C Type	Cert / Remarks
65-79165-61	PASSENGR SERVICE UNIT (L/H)	B737	SV TAG only
511000	FIRE DISCHARGE VALVE	B737	SV-AR TAG only
511000	FIRE DISCHARGE VALVE	B737	SV-AR TAG only
896767	ARMORED SENSING ELEMENT	B737	SV-AR TAG only
100-0127-01	CENTRAL CONTROL UNIT	B737	SV-AR TAG only
100-0649-01	SMOKE DETECTOR	B737	SV-AR TAG only
100-0649-01	SMOKE DETECTOR	B737	Form 8130
100-0649-01	SMOKE DETECTOR	B737	SV-AR TAG only
100-0649-01	SMOKE DETECTOR	B737	Form 8130
100-0649-01	SMOKE DETECTOR	B737	SV-AR TAG only
100-0649-01	SMOKE DETECTOR	B737	SV-AR TAG only
100-0649-01	SMOKE DETECTOR	B737	Form 8130
100-0649-01	SMOKE DETECTOR	B737	Form 8130
100-0649-01	SMOKE DETECTOR	B737	Form 8130
100-0649-01	SMOKE DETECTOR	B737	SV-AR TAG only
100-0649-01	SMOKE DETECTOR	B737	SV-AR TAG only
100-1019-01	UNIT SUPPRESSION	B737	SV-AR TAG only
100-1020-05	CONTROL DISPLAY UNIT	B737	SV-AR TAG only
100-1026-02	AFT CARGO PLUG	B737	SV-AR TAG only
100-1026-02	AFT CARGO PLUG	B737	SV-AR TAG only
100-1026-02	AFT CARGO PLUG	B737	SV-AR TAG only
100-1026-02	AFT CARGO PLUG	B737	SV-AR TAG only
5500-CIA-F23A	O2 BOTTLE	B737	SV-AR TAG only
5500-CIA-F23A	O2 BOTTLE	B737	SV-AR TAG only
5500-CIA-F23AIL	O2 BOTTLE	B737	SV-AR TAG only
65-52808-7	OVERHAT ACCURACY	B737	Form 8130
65-52809-15	FIRE DECTIN UNIT	B737	Form 8130
65-6020-7W	ENGINE FIRE DETECTOR UNIT	B737	SV-AR TAG only
69-37307-112	CONTOL MOD. ASSEMBLY	B737	SV-AR TAG only
69-37307-112	CONTOL MOD. ASSEMBLY	B737	SV-AR TAG only
805500-12	ENGINE FIRE EXTINGUISHER	B737	Form 8130
809500-17	ENG. FIRE BIRTH	B737	Form 8130
899315-05	FIRE/OVERHEAT WARNING	B737	SV-AR TAG only
PU90-461S	SMOKE DETECTOR	B737	Form 8130
PU90-499	SMOKE DETECTOR	B737	SV-AR TAG only
RD-AX1017	MALTIPIPER	B737	SV-AR TAG only
100-1026-01	FWD CARGO PLUG	B737	SV-AR TAG only
75130	FLOW SERVO VALVE	B737	Form 8130
10-60791-11	FLAP POS. INDICATOR	B737	SV TAG only
10-61312-1	SCREW ASSY.	B737	SV TAG only
10-61926-4	FLAP POS. INDICATOR	B737	SV TAG only
1697EA	VALVE LANDING SEL.	B737	SV TAG only
18-1738-3	FLAP POS. XMTR.	B737	Form 8130

Parts Number	Parts Description	A/C Type	Cert / Remarks
18-1738-52	FLAP POS. XMTR.	B737	Form 8130
18-1738-52	FLAP POS. XMTR.	B737	SV TAG only
18-1739-4	FLAP POS. XMTR.	B737	Form 8130
1-899-15/29	PROXMITY SENSOR	B737	SV TAG only
1-899-15/29	PROXMITY SENSOR	B737	Form 8130
1U1150-4	RUDDER POWER CTL PACK	B737	Form 8130
40TP13-5	A. C. MOTOR	B737	SV TAG only
60B40042-6	CONTROL SURFACE POS. XMTR.	B737	SV TAG only
6213-4	HYD. FUSE.	B737	SV TAG with TEARDOWN REPORT
6213-4	HYD. FUSE.	B737	SV TAG only
6213-4	HYD. FUSE.	B737	SV TAG only
6213-4	HYD. FUSE.	B737	SV TAG only
6213-4	HYD. FUSE.	B737	SV TAG with TEARDOWN REPORT
6213-4	HYD. FUSE.	B737	SV TAG with TEARDOWN REPORT
6213-4	HYD. FUSE.	B737	SV TAG only
6213-4	HYD. FUSE.	B737	Form 8130
6213-5	HYD. FUSE.	B737	SV TAG only
6213-5	HYD. FUSE.	B737	Form 8130
6213-5	HYD. FUSE.	B737	Form 8130
6213-5	HYD. FUSE.	B737	SV TAG with TEARDOWN REPORT
65-44561-13	FLIGHTY SPOILER ACTUATOR	B737	Form 8130
65-44581-5	SHUT OFF VALVE	B737	SV TAG only
65-44651-12	SLOT ACTUATOR ROD END	B737	SV TAG only
65-44651-14	L.E. SLAP SPOILER ACTUATOR	B737	Form 8130
65-44651-15	SLAT ACTUATOR ASSY.	B737	SV TAG only
65-44861-9	FUDDER POWER CONTROL	B737	Form 8130
65-44961-10	SPOILER ACTUATOR	B737	Form 8130
65-45132-10	COMPUTER ASSY. FEEL	B737	SV TAG only
65-45132-10	COMPUTER ASSY. FEEL	B737	SV TAG only
65-50256-8	FLAP TRANSMISSION	B737	SV TAG with TEARDOWN REPORT
65-50321-5	TRANSMISSION ASSY.	B737	Form 8130
65-50323-4	TRANSMISSION ASSY.	B737	Form 8130
65-50325-3	TRANSMISSION ASSY.	B737	Form 8130
65-50328-5	TRANSMISSION ASSY.	B737	Form 8130

Parts Number	Parts Description	A/C Type	Cert / Remarks
65-51510-1	GEAR BOX	B737	Form 8130
65-52805-379	FLIGHT INST ACC UNIT	B737	SV-AR TAG only
65-52807-26	FLAP/SLAT MODULE ACCESSORY	B737	SV TAG only
65-52807-26	FLAP/SLAT MODULE ACCESSORY	B737	Form 8130
65-52807-76	FLAP SLAT LEADY EDGE	B737	SV-AR TAG only
65-52818-9	AUTO SLAT COMPUTER	B737	SV-AR TAG only
65-65310-4	ELEVATOR BUS ASSEMBLY	B737	SV TAG only
65-73799-46	TAB. ELEVATOR FORM	B737	Form 8130
69-73703-8	RUDDER TRIM MOD. ASSY.	B737	SV TAG only
793T100-5	WIND FLAP DRIVE	B737	SV TAG only
7977-18-01	TRANSMITER	B737	SV TAG with TEARDOWN REPORT
966-0013-003	FLAP POS. STALL WARN XMTR.	B737	Form 8130
967-0212-002	DIGITAL FLIGHT DAT	B737	SV-AR TAG only
A61681	FLAP ASSYMETRY VALVE	B737	SV TAG only
G8381-8-160	HYD. FUSE.	B737	Form 8130
G8381-8-160	HYD. FUSE.	B737	Form 8130
G8381-8-60	HYD. FUSE.	B737	SV TAG with TEARDOWN REPORT
G8381-8-60	HYD. FUSE.	B737	SV TAG only
G8381-8-60	HYD. FUSE.	B737	SV TAG only
G8381-8-60	HYD. FUSE.	B737	SV TAG only
G8381-8-60	HYD. FUSE.	B737	SV TAG with TEARDOWN REPORT
IU1150-3	ACTUATOR	B737	SV TAG only
R1631	ROTARY ACTUATOR	B737	Form 8130
T602-4	RUDDER CONTROL	B737	Form 8130
2307-04-1	FUEL QTY. INDICATOR	B737	SV TAG only
2307-04-1	FUEL QTY IND.	B737	SV-AR TAG only
2307-04-1	FUEL QTY IND.	B737	SV-AR TAG only
473048	FUEL SUMMATION UNIT	B737	SV TAG only
4050-01-1	FUEL SUMMATION PANEL	B737	Form 8130
4050-01-1	FUEL CONSUMEABLE UNIT	B737	SV-AR TAG only
2670054	FUEL ADAPTOR	B737	SV TAG only
2670136	SHUT OFF FUEL VALVE	B737	SV TAG only
2670136	SHUT OFF FUEL VALVE	B737	SV TAG only
102-00012	TEMPERATURE FULB.	B737	SV TAG only
102-00012	TEMPERATURE FULB.	B737	SV TAG only
10-60529-2	SHUT OFF VALVE	B737	SV TAG only
20C144-3	FUEL SUMP VALVE	B737	SV TAG only

Parts Number	Parts Description	A/C Type	Cert / Remarks
2101-0201	FUEL QTY. INDICATOR	B737	SV TAG only
217200-4	CHECK VALVE	B737	SV TAG only
217200-4	CHECK VALVE	B737	SV TAG only
217500-1	FUEL PRESSURE SWITCH	B737	SV TAG only
217500-1	FUEL BOST. PUMP VALVE	B737	SV TAG only
217500-1	FUEL BOST. PUMP VALVE	B737	SV TAG only
217500-1	FUEL BOST. PUMP VALVE	B737	SV TAG only
21C1-3-22	FUEL QTY. INDICATOR	B737	Form 8130
21C1-3-22	SWITCH	B737	Form 8130
21C1-3-22	SWITCH	B737	Form 8130
21C1-3-22	SWITCH	B737	Form 8130
384453-001	TRANSISTORIZED VOLUMETRIC	B737	SV TAG only
391046-04129	PROBE TANK UNIT	B737	SV TAG only
391046-04129	PROBE TANK UNIT	B737	Form 8130
391046-04131	PROVE FUEL QTY	B737	SV TAG only
391046-04132	TANK UNIT	B737	SV TAG only
391046-04134	PROBE FUEL QTY.	B737	Form 8130
391046-04136	PROBE TANK UNIT	B737	SV TAG only
391046-04137	PROBE TANK UNIT	B737	SV TAG only
391046-05129	PROBE FUEL QTY.	B737	SV TAG only
391046-05130	PROBE FUEL QTY.	B737	SV TAG only
391046-05131	TANK UNIT	B737	SV TAG only
391046-05133	PROBE FUEL QTY.	B737	Form 8130
391046-05134	PROBE TANK UNIT	B737	SV TAG only
392708-1-1	AIRFLOW REGULATOR	B737	SV TAG only
393080-103	PROBE FUEL QTY.	B737	SV TAG only
393080-103	TOTAL FUEL INDICATOR	B737	Form 8130
40F104	FUEL FLOAT VALVE	B737	SV TAG only
40F104	FUEL FLOAT VALVE	B737	SV TAG only
42D275-1	PRESSURE SWITCH	B737	Form 8130
42D275-1	PRESSURE SWITCH	B737	Form 8130
8D111-1	FUEL SUMP VALVE	B737	SV TAG only
8D111-1	FUEL SUMP VALVE	B737	SV TAG only
8D112-1	FUEL SUMP VALVE	B737	Form 8130
8D112-1	FUEL SUMP VALVE	B737	SV TAG only
8TJ88GAP	FUEL FLOW POWER SUPPLY	B737	SV TAG only
8TJ88GAP1	FUEL FLOW POWER SUPPLY	B737	SV TAG only
8TJ95 GAB4	FUEL FLOW POWER SUPPLY	B737	SV TAG only
A-61499	CHECK VALVE	B737	SV TAG only
CN0940-137	BUSSING PLUG	B737	SV-AR TAG only
MA11A1062B	ACTUATION	B737	SV TAG only
ST106AB	PRESSURE TRANSMITTER	B737	SV TAG only
WL203EED-12	FUEL FLOW IND.	B737	SV-AR TAG only
1652	RELIEF VALVE	B737	SV TAG only
1652	RELIEF VALVE	B737	SV TAG only

Parts Number	Parts Description	A/C Type	Cert / Remarks
1652	RELIEF VALVE	B737	SV TAG only
316565	REDE VALVE	B737	SV TAG only
411200	SOLENOID VALVE	B737	SV TAG only
4006454	HYD. OIL QTY. XMTR	B737	SV TAG only
7505639	FILTER ASSEMBLY	B737	Form 8130
7551868	LINE FILER ASSEMBLY	B737	SV TAG only
7551868	LINE FILER ASSEMBLY	B737	SV TAG only
10470-6	HYDRAULIC PUMP FRIVEN MOTOR	B737	SV TAG only
1225P6-1	PRESSURE SWITCH	B737	SV TAG only
1697EA	HYD. CONTROL VALVE ASSY.	B737	SV TAG only
1697EA	HYD. CONTROL VALVE ASSY.	B737	SV TAG only
206001-003	ACCUSTIC FILTER	B737	Form 8130
206001-003	ACCUSTIC FILTER	B737	SV TAG only
206001-003	ACCUSTIC FILTER	B737	SV TAG only
436-2	GROUND FULT DECTOR	B737	SV TAG only
436-2	BULB DEV.	B737	SV TAG only
5210N701-2	LOW FLOW DECT.	B737	SV TAG only
6931-700	PRESSURE GAUGE	B737	SV TAG only
90G97	PRESSURE SWITCH	B737	SV TAG only
A-61499	RELIEF VALVE	B737	SV TAG only
AV13J5101	BRAKE BYPASS VALVE	B737	SV TAG only
AV13J5105	SOLENOID VALVE	B737	SV TAG only
AV13J5144	HYDRAULIC VALVE	B737	Form 8130
AV13J5144	HYDRAULIC VALVE	B737	Form 8130
AV13J5144	HYDRAULIC VALVE	B737	SV TAG only
AV13J5147	HYDRAULIC SELECTOR VALVE	B737	Form 8130
AV16B1350B	SHUT OFF VALVE	B737	Form 8130
AV16B1350B	SHUT OFF VALVE	B737	Form 8130
B711-1	HYDRAULIC QTY. SYSTEM	B737	Form 8130
B711-3	HYDRAULIC OIL INDICATOR	B737	SV TAG only
B711-6	HYDRAULIC OIL QTY INDICATOR	B737	SV TAG only
B711-6	HYDRAULIC OIL QTY INDICATOR	B737	Form 8130
H61C0552M1	CHECK VALVE	B737	SV TAG only
231-2	WINDOW HEAT	B737	SV TAG only
231-2	WINDOW HEAT	B737	SV TAG only
65-52-803-8	WINDOW HEAT	B737	SV TAG only
69-37320-32	ANTI-ICE MODULE ASSY.	B737	SV TAG only
69-37320-32	ANTI-ICE MODULE ASSY.	B737	SV TAG only
69-37320-82	ANTI-ICE MODULE ASSY.	B737	Form 8130
C-201-1500-1	RAIN REPELLANT VLAVE	B737	SV TAG only
XW20548MIA-3	WIPPER MOTOR ASSY.	B737	SV TAG only
XW20548MIA-3	WIPPER MOTOR ASSY.	B737	SV TAG only

Parts Number	Parts Description	A/C Type	Cert / Remarks
15625	RECORDER FLT. DIR. DATA	B737	SV TAG only
162BL704D	OIL TEMP. INDICATOR	B737	Form 8130
162BL801	FUEL TEMP. INDICATOR	B737	SV TAG only
162BL802A	OIL TEMP. INDICATOR	B737	Form 8130
162BL802A	OIL TEMP. INDICATOR	B737	Form 8130
162BL802A	OIL TEMP. INDICATOR	B737	Form 8130
162BL902	OIL TEMP. INDICATOR	B737	Form 8130
1680-4U-A2	RATE OF DUMB IND.	B737	SV TAG only
214C50-2	SWITCH PAY	B737	SV TAG only
2222601-53	ACQUISITION UNIT	B737	SV TAG only
3001-01-101-2	ACCELEROMETER	B737	SV TAG only
522-4655-001	MODE CONTROL	B737	Form 8130
522-782	AIR BORNE VABRATION	B737	SV-AR TAG only
69-37314-28	MODULE ASSY.	B737	Form 8130
69-37317-51	HYDRAULIC PUMP MODULE	B737	Form 8130
69-37317-54	HYDRAULIC PUMP MODULE	B737	Form 8130
69-37319-60	AIR CONDITIONING MODULE	B737	Form 8130
69-37325-135	TEST FLIGHT RED	B737	SV-AR TAG only
69-37325-36	WARNING TEST MODULE	B737	SV TAG only
69-37335-44	FUEL SYSTEM MODULE	B737	Form 8130
69-37339-21	STALL WARNING MODULE	B737	Form 8130
69-37339-21	STALL WARNING MODULE	B737	Form 8130
69-37369-11	PANEL WARNING MODULE	B737	Form 8130
69-393388-34	EFT	B737	SV-AR TAG only
69-55179-23	MODULE	B737	Form 8130
69-60764-1	CIRCUIT BRAND	B737	Form 8130
APE909-0051	CLOCK	B737	SV TAG only
APE909-0051	CLOCK	B737	SV TAG only
B711-3	HYDRAULIC QTY INDICATION	B737	SV TAG only
C5C (FAA-TSO-C7C	STAND BY COMPUTERS	B737	SV-AR TAG only
CRDL-0C7E	HYDRAUL	B737	SV-AR TAG only
SRDL-6D	DUAL PRESS INDICATION	B737	SV TAG only
4538	VALVE RELIST	B737	SV TAG only
75130	SERVO VALVE	B737	SV TAG only
9550339	TRANSDUCER ASSY.	B737	SV TAG only
1125P0028	PRESSURE SWITCH	B737	SV TAG only
1125P0028	PRESSURE SWITCH	B737	SV TAG only
1225P41	HYD. PRESSURE SWITCH	B737	SV TAG only
300-569	HALF M/WHEL HUB.	B737	SV TAG only
40-817	AUTO SKID	B737	SV-AR TAG only
42-307	ANTI SKID CONTROL BOX	B737	Form 8130
42-307	ANTI SKID CONTROL BOX	B737	Form 8130
42-713	ANTI SKID CONTROL BOX	B737	SV TAG only
65-44504-2	MAIN GEAR DAMPER	B737	Form 8130

Parts Number	Parts Description	A/C Type	Cert / Remarks
65-44521-4	BRAKE METERY VALVE	B737	SV TAG only
65-44521-6	BRAKE METERY VALVE	B737	SV TAG only
65-44521-6	BRAKE METERY VALVE	B737	Form 8130
65-44691-4	MODUE L/GEAR ASSY	B737	SV TAG only
65-44731-2	ACTUATOR BRAKE VALVE	B737	Form 8130
65-44731-4	ACTUATOR BRAKE VALVE	B737	SV TAG only
65-44731-4	ACTUATOR BRAKE VALVE	B737	Form 8130
65-44810-6	ACTUATOR MLG.	B737	Form 8130
65-46109-4	ACTUATOR BEAM	B737	SV TAG only
65-46288-5	UPPER LINK NLH LOWER	B737	SV TAG only
65-63663-3	BED EL (HP942)	B737	SV TAG only
65-67963-1	LINK TORSSION	B737	SV TAG only
94P1-1	PRESSURE SWITCH	B737	SV TAG with TEARDOWN REPORT
9550604L	ANTI SKID CONTROL VALVE	B737	SV TAG only
9550604L	ANTI SKID CONTROL VALVE	B737	SV TAG only
9550604L	ANTI SKID CONTROL VALVE	B737	SV TAG only
AV13J5101	HYD. BRAKE BYPASS VALVE	B737	Form 8130
AV24E1144	PACKING BRAKE SHUT OFF VALVE	B737	SV TAG only
SRL-OC-7EM	HYD. BRAKE PRES.	B737	SV-AR TAG only
72914	R/H OVER LIGHT ABBY	B737	SV TAG only
10-1074-51B	R/H OVER LIGHT ABBY	B737	SV TAG only
10-1113-3	DOME LIGHER	B737	SV TAG only
10-1114-3	INBOARD LANDING LAMP	B737	SV TAG only
10-60752-23 OR 64-1	BALLAST TRANSFORMER	B737	SV TAG only
10-60752-23 OR 64-1	BALLAST TRANSFORMER	B737	SV TAG only
10-60752-23 OR 64-1	BALLAST TRANSFORMER	B737	SV TAG only
11-0283-2	EMERG. EXIT LIGHT	B737	Form 8130
11-0283-2	EMERG. EXIT LIGHT	B737	Form 8130
11-0283-3	EMERG. EXIT LIGHT	B737	Form 8130
11-0283-3	EMERG. EXIT LIGHT	B737	Form 8130
15-0069-17	SPORT LIGHT	B737	SV TAG only
30-0234-2L-4174	ASSY POSITION LIGHT	B737	SV TAG only
30-0234-2L-4174	FWD POSITION LIGHT	B737	SV TAG only
30-0234-4174	FWD POSITION LIGHT	B737	SV TAG only
30-0432-13	EMERG. EXIT LIGHT	B737	SV TAG only
30-0591-3	LIGHT POSITION	B737	SV TAG only
30-0906-105	STROBE LIGHT (LIGHT)	B737	Form 8130
30-0906-109	STROBE LIGHT WING TIP	B737	SV TAG only
31-1498-1	LIGHT ASSY	B737	SV TAG only
61-0479-1	POWER SUPPLY	B737	SV TAG only
64-1	TRANSFORMER	B737	SV TAG only
65-0294-3	MASTER CAUTION LIGHY ASSY.	B737	SV TAG only

Parts Number	Parts Description	A/C Type	Cert / Remarks
65-0294-3	MASTER CAUTION LIGHY ASSY.	B737	SV TAG only
69-674335-5	PANEL LIGHT	B737	SV TAG only
69-76436-11	FLIGHT DETECTOR	B737	SV TAG only
10-1074-5	OVER WRONG EXIST LIGHT	B737	SV-AR TAG only
8900	ALTITUDE ALERT	B737	Form 8130
2056-01-1	SERVO ALTIMETE IND.	B737	Form 8130
2057-01-1	SERVO ALTIMETE IND.	B737	Form 8130
2057-01-1	F/O	B737	SV-AR TAG only
81194	G.P.S. ANTI KIT STUD	B737	SV TAG only
2261-02-1	TOTAL AIR TEMP.	B737	Form 8130
2600-03-1	IRS WASTER CANTERS	B737	SV-AR TAG only
011-00106-00	CUPS	B737	SV-AR TAG only
011-00134-00	G.P.S. ANTI KIT STUD	B737	SV TAG only
011-00134-00	S/O	B737	SV-AR TAG only
066-01127-1101	TRANSPONDER	B737	SV TAG only
066-1093-10	D.M.E. TRANSCIEVER	B737	Form 8130
080-20325-01	POWER SUPPLY TRANSFORMER	B737	SV-AR TAG only
100-1019-01	MASTERR BEHORE	B737	SV-AR TAG only
10-61226-29	VHF NA.	B737	SV-AR TAG only
10-61333 -3	ANTENNA	B737	SV TAG only
161BL 501	TOTAL AIR TEMP.	B737	SV TAG only
167550-01-01	CONTROL DISPLAY UNIT	B737	SV-AR TAG only
200-86890-101	CHRONOMETER	B737	SV-AR TAG only
200-91713-101	G.S ANTENNA	B737	SV-AR TAG only
2070122-0502	DOUPLER ANTENNA	B737	SV-AR TAG only
2566A30A	SENSOR ASSEMBLY	B737	Form 8130
2566A30A	SENSOR ASSEMBLY	B737	SV TAG only
2588282-657	R.M. COMPASS IND.	B737	SV TAG only
2588317-915	COMPARATOR WARN UNIT	B737	SV TAG only
2589419-901	FLUX VALVE	B737	SV TAG only
2589419-901	FLUX VALVE	B737	Form 8130
2591202-911	COMPASS CONTROLLER	B737	Form 8130
31-24-81-50	TRANSPONDER ANTENNA	B737	SV-AR TAG only
364-1	PHASE CONVERTER	B737	SV TAG only
3932-IAG-B1-1	TURN & SLIP INDICATOR	B737	SV TAG only
4019700-902	A.D. INDICATOR	B737	SV TAG only
40-302-04	TOTAL AIR TEMP.	B737	SV TAG only
40-302-04	TOTAL AIR TEMP.	B737	Form 8130
40-34559-901	SEN	B737	SV-AR TAG only
4037539-905	H.S. INDICATOR	B737	Form 8130
4037539-905	H.S. INDICATOR	B737	Form 8130
418-334-000	A.D.F. ANTI COUPLER	B737	SV TAG only
473-157-302	RECEIVER PROCESSOR UNIT	B737	SV TAG only
513-18352-9	AIR SPEED INDICATOR	B737	Form 8130

Parts Number	Parts Description	A/C Type	Cert / Remarks
522-2702-052	D.M.E. INTERROGATOR	B737	SV TAG only
522-2782-004	COURSE INDICATOR	B737	Form 8130
522-2996-01	LOCALZER	B737	SV-AR TAG only
522-2996-011	MARKER BEACON RECEIVER	B737	SV TAG only
522-3120-004	INT. AMPLIFIER IAS RACK	B737	SV TAG only
522-3487-003	F.D.I.	B737	SV TAG only
522-3700-004	F.A.D. INDICATOR	B737	Form 8130
522-4825-008	DADAR ALT INDICATOR	B737	Form 8130
567-1575-133	GPS ANTENNA	B737	SV TAG only
622-2920-001	D.M.E. INTERROGATOR	B737	SV TAG only
622-3371-901	RECEIVER TRANSMITTER	B737	SV TAG only
622-3890-020	RADIO TRANSCEIVER ALTIMETER	B737	Form 8130
622-7998-013	ELECTRONIC DISPLAY UNIT	B737	Form 8130
622-8000-006	SYNUBOL GEN.	B737	SV-AR TAG only
65-52805-333	FLIGHT ACCESORY UNIT	B737	Form 8130
69-37322-15	GROUND PREXIMATY PANEL	B737	SV-AR TAG only
69-37336-8	SPEAKER GRD. PROX. AUR.	B737	SV TAG only
69-37344-22	TECH SWITCH	B737	SV-AR TAG only
69-37399-1	TRIAIXIC ACCERELATOR	B737	SV-AR TAG only
69-3744-23	MODULE ASSY.	B737	SV TAG only
69-75978-1	O2 CONTROL PENEL	B737	SV-AR TAG only
705-7V4	HORIZON GYRO	B737	SV TAG only
705-7V42	HORIZON GYRO	B737	SV TAG only
777-1492-004	A.D.F. RECEIVER	B737	SV TAG only
777-1492-005	A.D.F. RECEIVER	B737	SV TAG only
777-1492-005	A.D.F. RECEIVER	B737	SV TAG only
777-1493-004	A.D.F. CONTROL PANEL	B737	Form 8130
792-6140-001	D. BEARING IND.	B737	SV-AR TAG only
822-0761-001	VHF/NAU RIR	B737	SV TAG only
965-0476-088	G.P.S. COMPUTER	B737	SV TAG only
965-0876-030	WINDSHEAR COMPUTER	B737	Form 8130
A4186910015	ALTIMETER INDICATOR	B737	SV TAG only
B0247-81101	MACH AIR SPEED INDICATOR	B737	Form 8130
C5C 9066-00-056-1978	STANBY COMPASS	B737	SV TAG only
D2-723Q1	SENSOR	B737	SV-AR TAG only
DMN150-2-1	A.T.C ANTENNA	B737	SV TAG only
DMN150-22	RG LOAXIAL SWITCH	B737	SV-AR TAG only
DMPN34A	RADIO ALT ANTENNA	B737	SV-AR TAG only
G6773-04	VHF/NAV CONTROL PANEL	B737	Form 8130
G6993-03	TCAS CONTROL PANEL	B737	SV TAG only
H341ANM	GYROSCOPIC HORIZON IND.	B737	Form 8130
N4-26	STALL WARNING PANEL	B737	SV-AR TAG only
WL/1103AM/MS/10	SERVO ALTIMETER	B737	SV TAG only
WL106AMA/1	MACH AIR SPEED INDICATOR	B737	SV TAG only

Parts Number	Parts Description	A/C Type	Cert / Remarks
WL501RC1	RATE OF CLIMP	B737	SV TAG only
182936	OXYGEN PRESSURE INDICATOR	B737	SV TAG only
182972	OXYGEN PRESSURE INDICATOR	B737	SV TAG only
174660-N2	MASK OXYGEN ASSY	B737	SV TAG only
22505-09	PNEUMATIC CONTROL VALVE	B737	SV TAG only
27550-1	OXYGEN SHUT OFF VALVE	B737	SV TAG only
27550-1	OXYGEN SHUT OFF VALVE	B737	SV TAG only
27550-1	OXYGEN SHUT OFF VALVE	B737	SV TAG only
28000-1	OXYGEN REGULATOR	B737	SV TAG only
358-1211-1	MASK OXYGEN CREW	B737	SV TAG only
358-1432V-1	MASK OXYGEN CREW	B737	SV TAG only
705-15V4	HORIZONE HYD.	B737	SV TAG only
831S-G250-20R	OXYGEN TRANSDUCER	B737	SV TAG only
C5C	COMPASS	B737	SV TAG only
123558-1-4	AIR CHECK VALVE	B737	SV TAG only
123558-1-4	AIR CHECK VALVE	B737	SV TAG only
123558-1-4	AIR CHECK VALVE	B737	SV TAG only
129240-1-1	THERMOSTAT VALVE	B737	SV TAG only
321404-1-1	PRECOOLER VALVE	B737	SV TAG only
SRD4-6D	PRESSURE INDICATOR	B737	SV TAG only
ST106AB	PRESS TRANSMITER	B737	SV TAG only
3600-1-1	TOILET VALVE ASSY.	B737	SV TAG only
3600-1-1	TOILET VALVE ASSY.	B737	SV TAG only
1145-0015	WATER QTY XMTR.	B737	SV TAG only
1552-002-9	PRESSURE REGULATOR	B737	Form 8130
3205-21	TOILET MOTOR	B737	SV TAG only
3299-2	TOILET TIMER	B737	Form 8130
400500-1	SHUT OFF VALVE	B737	Form 8130
AV13J5147	VALVE ASSY	B737	SV TAG only
TD1715-002	TOILET TIMER SWITCH	B737	SV TAG only
TD1715-002	TOILET TIMER SWITCH	B737	SV TAG only
WL201EED2	N2 RPM	B737	SV TAG only
2610-07-1	CHRONOMETER	B737	SV TAG only
69252371	APU THERMO COUPLER	B737	SV TAG only
152BL702A	EGT. INDICATOR	B737	SV TAG only
152BL802B	EGT. INDICATOR	B737	SV TAG only
2-541501-1	A.P.U. ACTUATOR DOOR	B737	SV TAG only
320362-2-1	SOLENOID VALVE APU	B737	SV TAG only
379580-650	APU. OIL PUMP ASSY	B737	SV TAG only
65-52801-31	A.P.U. CONTROL BOX	B737	Form 8130
65-68935-4	APU COOLING FAN	B737	SV TAG only
69-37314-19	APU MODULE ASSY	B737	SV TAG only
899323-4	APU. CUMBUSTION CAP	B737	Form 8130

Parts Number	Parts Description	A/C Type	Cert / Remarks
V3900-11	SOLENOID VALVE	B737	SV TAG only
239YC16	DC MOTOR ASSY	B737	Form 8130
241YH35	MOTER AIR STAIRS	B737	SV TAG only
2-541501-1A	SNUBBER	B737	Form 8130
285T0855-1	F. DAS. CONTROLLER	B737	SV TAG only
65-2346-4	SNUBBER	B737	Form 8130
65-55516-25	DOOR FUELING PANEL	B737	SV TAG only
65-58116-4	GEAR BOX ASSY AIR STAIR	B737	SV TAG only
807962-403	ACTUATOR AIR STAIR	B737	Form 8130
893637-1	DC MOTOR ASSY	B737	Form 8130
90-10072-1	SNUBBER	B737	SV TAG only
941D631-1	MOTER FORWARD AIR STAIR	B737	SV TAG only
65-44503	CYLINDER FEEL ASSY.	B737	SV TAG only
N65-45791-4	CABIN WINDOW	B737	SV TAG only
N65-45791-4	CABIN WINDOW	B737	SV TAG only
N65-45791-4	CABIN WINDOW	B737	SV TAG only
N65-45791-4	CABIN WINDOW	B737	SV TAG only
N65-45791-4	CABIN WINDOW	B737	SV TAG only
N65-45791-4	CABIN WINDOW	B737	SV TAG only
N65-45791-4	CABIN WINDOW	B737	SV TAG only
165-46428-33	FLAP TRACK ASSY	B737	SV TAG only
65-46481-86	FLAP TRACK ASSY	B737	SV TAG only
65-46481-96	CARRIAGE FLAP	B737	SV TAG only
13636/5467-1SA3	ISOLATOR	B737	SV TAG only
13636/5467-1SA3	ISOLATOR	B737	Form 8130
13636/5467-1SA3	ISOLATOR	B737	Form 8130
136-95804-07	ISOLATOR	B737	SV TAG only
65-85369-11	NOSE DOME ASSY.	B737	Form 8130
541422	GLIDE STROBE ANTENNA	B737	SV TAG only
10-319647-1	LEAD IGNITION CABLE	B737	SV TAG only
10-319647-1	LEAD IGNITION CABLE	B737	SV TAG only
1667	REFIEF VALVE	B737	SV TAG only
1667	REFIEF VALVE	B737	SV TAG only
2720-01-01	THURST MODE PANEL.	B737	SV TAG only
10034-0000-02	OIL QTY INDICATOR	B737	SV TAG only
152BL801E	EGT. IND.	B737	SV TAG only
152BL801E	EGT IND.	B737	SV TAG only
152BL801E	EPR IND. J9	B737	SV TAG only
152BL802A	EGT IND.	B737	SV-AR TAG only
152BL803	EGT TACH.	B737	SV TAG only
152BL803B	EGT IND.	B737	SV TAG only
152BL803B	EGT IND.	B737	SV TAG only
57-106AB	TRANSFORMER	B737	SV-AR TAG only
65-65919-5	NOSE DOME ASSY.	B737	SV TAG only
8DJ81WAG4U	N2 TACH. IND.	B737	SV TAG only
8DJ81WAG4U	N1 TACH. IND.	B737	Form 8130

Parts Number	Parts Description	A/C Type	Cert / Remarks
8DJ8ILYV	N2 TACH. IND.	B737	SV TAG only
JG298A4	EPR IND.	B737	SV TAG only
LG80A-6	E.P.R. TRANSMITTER	B737	SV TAG only
WL101EED3	N1 RPM.	B737	SV-AR TAG only
WL201EED2	N2 RPM	B737	SV-AR TAG only
WL202EED6	EGT IND.	B737	SV-AR TAG only
60470	A/T ACTUATOR	B737	SV TAG only
102-000-12	OIL TEMP BULB IND.	B737	SV TAG only
162-B2802A	IND OIL TEMP	B737	SV TAG only
173-1015-1	T/R SUPPORT ASSY	B737	SV TAG only
173-1044-4	T/R CASING	B737	Form 8130
173-1055-1	T/R SUPPORT ASSY	B737	SV TAG only
1U1225	VALVE SOLENOID	B737	Form 8130
393020-003	OIL QTY. IND.	B737	SV TAG only
56B3A	OIL PRESS IND.	B737	SV TAG only
56B3A	OIL TEMP SWITCH	B737	SV TAG only
58120-1	T/R ACTUATOR	B737	Form 8130
65-44531-4	VALVE CONTROL T/R	B737	Form 8130
69-37357-32	T/R OVERRIDE MOCH.	B737	SV TAG only
80C852	SWITCH OIL PRESS	B737	SV TAG only
94P1-1	PRESSURE SWITCH	B737	SV TAG only
SRDL-7G	BRAKE PRESSURE INDICATOR	B737	SV TAG only
10031-0000-01	OIL QTY IND.	B737	SV-AR TAG only
1033-0000-020	HYD OIL QTY.	B737	SV-AR TAG only
16BL804A	OIL TEMP. IND.	B737	SV-AR TAG only
56B3A	OIL TEMP. SWITCH	B737	Form 8130
SRL-04L	OIL PRESS IND.	B737	SV TAG only
SRL-0C4N	OIL IND. PRESSURE	B737	SV TAG only
664236	EGT HARVESS	B737	SV TAG only